



 











The Hong Kong University of Science and Technology

Cisco Unified IP Phone 8845 User Quick Reference






 



- ① Incoming call or voicemail indicator
- ② Camera
- ③ Feature and session buttons
- ④ Softkeys
- ⑤ Back, Navigation cluster, and Release
- ⑥ Hold, Transfer, and Conference
- ⑦ Headset, Speakerphone, and Mute
- ⑧ Voicemail, Applications, and Directory
- ⑨ Volume



Service Features	Access
Internal Call	Dial 4 digits extension no.
External Call	Dial 9 + tel. no.
Speakerphone (Handsfree Speaker)	Press (Green Light is on)
<ul style="list-style-type: none"> • On • Off 	Press again
Audio Mute	During a call, press (Red Light is on)
<ul style="list-style-type: none"> • On • Off 	Press again
Video Mute	Turn the camera shutter clockwise to start the video
<ul style="list-style-type: none"> • On • Off 	Turn the camera shutter counterclockwise to stop the video
Redial (redial last dialed number)	Press { Redial }
Call Hold	Press (the 1 st line button flashes green)
<ul style="list-style-type: none"> • put a line on hold • reconnect the call 	Press { Resume } or
Call Transfer	+ Ext. No. / 9 + Tel No. + / { Transfer }
<ul style="list-style-type: none"> • transfer • reconnect (if the line is no answer / busy) 	Press { Cancel } + { Resume }
Conference (8 Parties Audio/Video Calls)	+ Ext. No. / 9 + Tel. No. + / { Conference }
<ul style="list-style-type: none"> • set up • reconnect (if the line is no answer / busy) 	Press { Cancel } + { Resume }
Call Pickup	Dial *8
Call Park (Hold a call and retrieve it at another phone)	During a call, transfer the call to { 2755 } (A voice prompts a 4-digit Park No.)
<ul style="list-style-type: none"> • park a call • reconnect a parked call 	Enter the Park No. at another phone
Call Forward	Press { Fwd All } + Ext. No.
<ul style="list-style-type: none"> • set up (all calls) 	(Screen shows & "To XXXX")
<ul style="list-style-type: none"> • cancel 	Press { Fwd Off }

Service Features	Access
Access Voicemail System (Note: The new voicemail system number is 8181 instead of 8000) <ul style="list-style-type: none"> internal access external access 	When having voicemail, Message Waiting Indicator is on (Red). Press  or dial 8181 , enter pin no.# Dial 2358 8181 , enter 4-digit extension no. & pin no.#
Call Log (<i>total stores up to 150 records</i>) <ul style="list-style-type: none"> dial from call log 	 Settings / Applications + (1. Recents) + select a call log record + Press { All Calls } or { Missed Call } Received -  , Placed -  , Missed -  + { More } + { Edit Dial } to edit the displayed number if necessary + { Call } / lift the handset to start calling
Personal Directory (Personal Phonebook) <ul style="list-style-type: none"> Open Personal Phonebook 	 + (4. Personal Phonebook) + { Select } + (2. Phone Directory) + { Submit } Use the Navigation bar and button to scroll and select
<ul style="list-style-type: none"> search for an entry 	Open Personal Phonebook + { Search } + enter Search Criteria + { Submit }
<ul style="list-style-type: none"> dial from entry 	Search for an entry + { Select } + { Dial }
Speed Dial	Press the session button next to the name
Review Call History	Press the button next to  or  , select the number to edit and dial
Telephone Web Portal	Launch a web browser, & go to https://frsip.ust.hk/ Login using 4-digit telephone extension no. and telephone web portal password
Contrast	Press  + (2. Settings) + (3. Brightness) +  to adjust + { Save } to confirm
Ring Tone	Press  + (2. Settings) + (2. Ring Tone) +  to change + select Ring Tone + { Play } to listen / { Set } to use
Volume <ul style="list-style-type: none"> adjust the handset, headset and speaker volume 	When handset, headset or speaker is in use (off hook), press: 
<ul style="list-style-type: none"> adjust the ringer volume 	When handset, headset and speaker is not in use (on hook), press: 

Buttons / Keys

											
Handsfree Speaker	Audio Mute	Hold	Transfer	Conference	Navigation (Up, Select, Down)	Voicemail	Settings / Application	Contacts	Volume Control	Forwarded icon	{ } Softkey